

HASP 5.22 Driver Installation

For MAP Customers using Est-Duct / CAD-Duct Solids / CAM-Duct "PM2000"

1. Download the 5.22 Drivers (HASPdinst_522.ZIP) to your Desktop
2. Extract the contents (**haspdinst.exe & readme.txt**) to the following locations:

- 📁 **EST-Duct** - C:\EST-PM\XTRA
- 📁 **CAM-Duct/PM2000** - C:\CAM\XTRA
- 📁 **CAD-Duct Solids** - C:\Program Files\CadDuct Solids

3. Click "Yes" if prompted to overwrite
4. Go to Start > Run
5. Click Browse
6. Browse to the location of the haspdinst.exe
7. Highlight with one Left Click
8. Click Open

You should now be back to the Run dialogue with one of the following text strings present:

- ➡ **EST** - C:\EST-PM\XTRA\haspdinst.exe -i
- ➡ **CAM** - C:\CAM\XTRA\haspdinst.exe -i
- ➡ **CAD** - "C:\Program Files\CadDuct Solids\haspdinst.exe" -i

9. Add the install switch indicated in red
10. Click OK to install the drivers

The application should now work with the dongle.